



FlipShare


FlipShare Producing Guide

FLIPCAM SETUP

Admin Rights needed

After recording your video content, connect your FlipCam to a USB port on your computer. A popup window will ask you to choose what you want to do:


1. Choose View your Flip Camcorder Videos using the program on the device, and click OK.
2. Accept the license agreement and click I Agree to install 3ivx video compatibility software (note: have your IT person handy)
3. Keep your FlipCam connected to your computer to produce your video

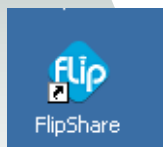

This icon will be placed on your desk top. When you are ready to produce another video, it will take you to FlipShare.



After you load install the software (directly from your FlipCam, you are ready to produce your video. You won't be able to upload or edit your video in software (like Windows Movie Maker) without these steps.

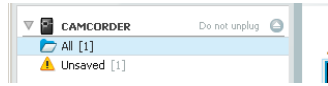1. The FlipShare intro screen will come up whenever you click the shortcut on your desktop. It will load your FlipShare screen.
2.  Click on "Unsaved" under the Camcorder icon. Your video should appear in the screen.
3. Click on "Movie" and a popup box appears.
4. Drag your video into the box, and click on "Next." Add titles and credits (Note: skip the music if you have voice—even the softer option overrides the FlipCam audio recorder)
5. Name your video and click on "Create Movie."
6. Your movie it will be saved into your computer under "My Documents" in a FlipShare folder)
7. Your movie is ready to upload onto a website (as an mp4). You are also ready to import into a movie making editor.