

Deleting Videos from the Camera

NOTE: Once your videos are deleted from your Flip video camera, they can no longer be retrieved nor found in the Recycle Bin (Windows) or the Trash Bin (Mac).

To learn how to delete your videos in Flipshare, click [here](#).


[Deleting videos on a Flip Mino or MinoHD video camera](#)

[Deleting videos on a Flip Ultra, Ultra HD and UltraHD II video camera](#)

[Deleting videos on a Flip SlideHD video camera](#)

Deleting videos on a Flip Mino or MinoHD video camera:

The **Delete**  button is marked with a **trash can** icon at the upper right corner of the **Record** button.

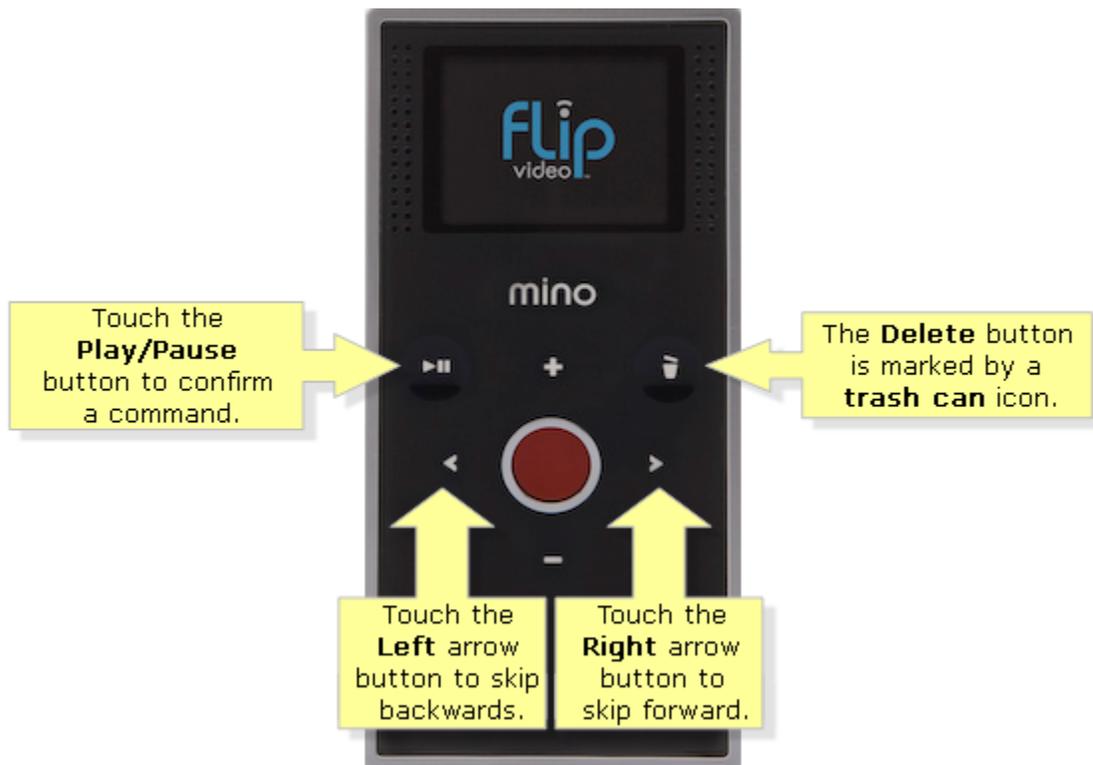

Step 1:


With your video camera powered **ON**, browse through your recorded videos by pressing the **Left**  and **Right**  **Arrow** buttons.

Step 2:

Once the video you want to delete is displayed on the screen, press the **Delete**  button.

Step 3:

A **Delete Video?** prompt will appear and give you three options: **Yes**, **No**, and **All**. Navigate with the **Left**  or **Right**  **Arrow** buttons to select an option.

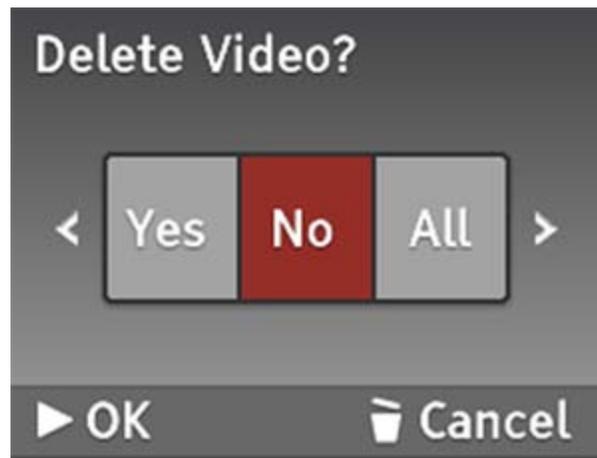

Option 1: Yes

Select **Yes** to delete the video. Press the **Play** button to confirm.

Option 2: No

Select **No** to cancel. Press the **Play** button to confirm and return to the **Ready** screen.


Option 3: All

If you want to delete all videos from your camcorder, select **All** by pressing the **Right Arrow** button. Press the **Play** button to confirm.

NOTE: Only the **Play/Pause** button will confirm the delete command. Pressing other buttons will not delete the videos. The camcorder will automatically return to the **Ready** screen if no input is detected within **five seconds**.

Deleting videos on a Flip Ultra, UltraHD and UltraHD II video camera:

The **Delete** button is marked with a **trash can** icon at the upper right corner of the **Record** button.

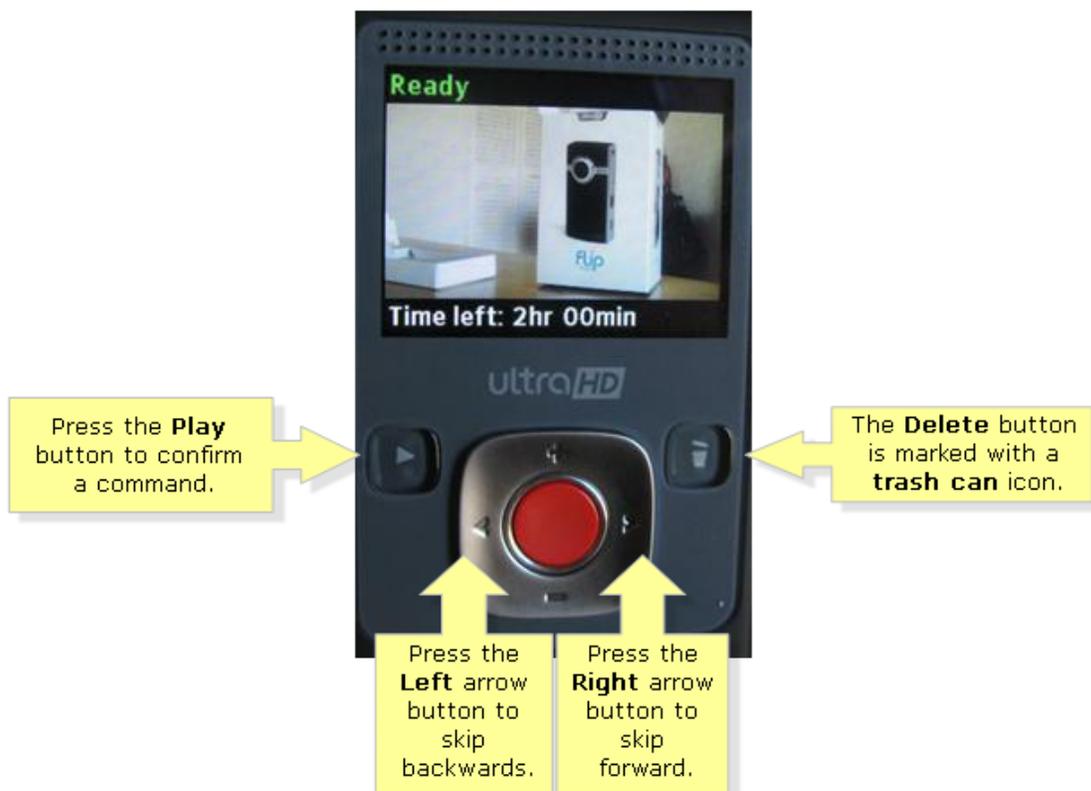

Step 1:


With your video camera powered **ON**, browse through your recorded videos by pressing the **Left**  and **Right**  **Arrow** buttons.

Step 2:

Once the video you want to delete is displayed on the screen, press the **Delete**  button.

Step 3:

A **Delete Video?** prompt will appear, giving you three options: **Yes**, **No**, and **All**. Navigate with the **Left**  and **Right**  **Arrow** buttons to select an option.

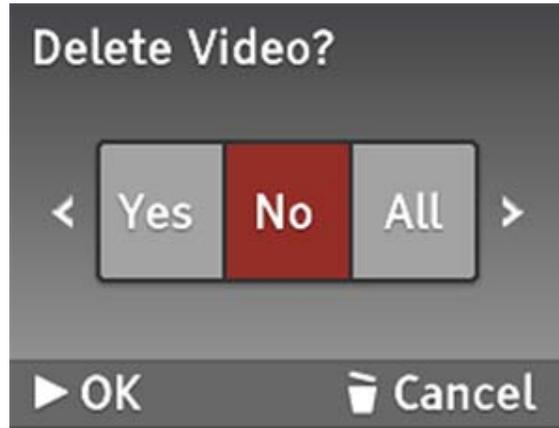

Option 1: Yes

Select **Yes** to delete the video. Press the **Play**  button to confirm.

Option 2: No


Select **No** to cancel. Press the **Play**  button to confirm and return to the **Ready** screen.

Option 3: All

If you want to delete all videos from your video camera, select **All** by pressing the **Right Arrow**  button. Press the **Play**  button to confirm.

NOTE: Only the **Play** button will confirm the delete command. Pressing other buttons will not delete the videos. The video camera will automatically say **Not deleted** and will take you back to the **Ready** screen if no input is done within **five seconds**.

NOTE: Only the **Play** button will confirm the delete command. Pressing other buttons will not delete the videos. The video camera will automatically say **Not deleted** and will take you back to the **Ready** screen if no input is done within **five seconds**.

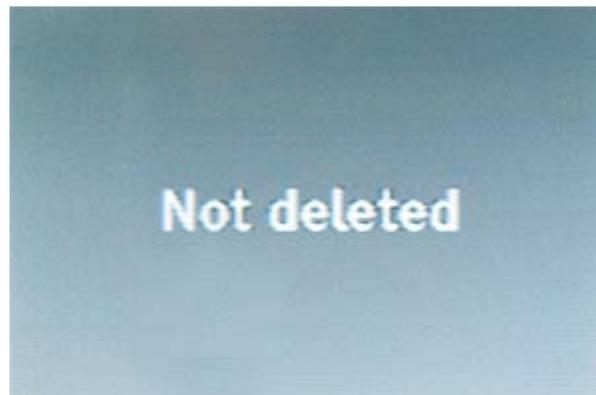

QUICK TIP: If you are still unable to delete your videos, the **Delete** function may have been locked. To know how to lock or unlock the Delete function on your video camera, click [here](#).